EN

ParACCU 620
IP WDMX


F7100445



User Manual

IP65 LED 0,2 m

KEEP THIS MANUAL FOR FUTURE REFERENCE

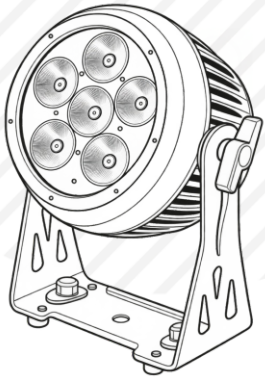

series EVENT by FLASH

ParACCU 620 IP WDMX

CONTENTS

INTRODUCTION 2
SAFETY INFORMATION 3
PACKAGE CONTENTS 4
INSTALLATION 5
CONNECTIONS AND SETTINGS 6
DMX CHARTS 10
MENU STRUCTURE 13
REMOTE CONTROL / APP 15
TECHNICAL DRAWINGS 16
TROUBLESHOOTING 17
CLEANING AND MAINTENANCE 18
SPECIFICATIONS 19

INTRODUCTION

We are pleased that you have chosen the **Flash Event ParACCU 620 IP WDMX**, adding another lighting fixture to your equipment inventory. We hope that this fixture will meet your expectations and inspire creative solutions in your future lighting projects.

FOR SAFETY REASONS AND TO ENSURE RELIABLE OPERATION, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE USING THE DEVICE.

SAFETY INFORMATION



WARNING! Exercise extreme caution when operating the fixture. Dangerous voltages are present inside the device — contact with electrical components may result in severe electric shock.

To ensure safe and reliable long-term operation, the user must follow all safety instructions and warnings provided in this user manual.



IMPORTANT! Damage resulting from failure to follow the instructions in this manual may not be covered by the warranty. To the extent permitted by applicable law, the manufacturer and seller shall not be held liable for damage resulting from improper use of the fixture or failure to follow the manufacturer's recommendations.

If the fixture has been exposed to sudden temperature changes, for example during transportation, do not switch it on immediately. Condensation may damage electronic components. Before switching on the fixture, allow it to reach ambient temperature and dry completely.



IMPORTANT! The fixture can be powered by an AC 100–240 V, 50/60 Hz mains supply or its built-in lithium-ion battery. When using mains power, ensure that the supply voltage and frequency meet the fixture's requirements. The protective earth (PE) conductor must be properly connected to ground.

Regularly inspect the condition of power cables and connectors. Do not use damaged cables or improperly made connections. It is recommended to disconnect the fixture from the mains supply when not in use.



WARNING! The fixture must only be placed on a stable surface or installed using suitable mounting hardware. An improperly secured fixture may tip over or fall, causing personal injury or equipment damage.

WARNING! During installation, use mounting hardware suitable for the weight of the fixture and the intended installation method. All brackets, screws and connections must be properly secured and protected against accidental loosening.

WARNING! When installing the fixture overhead, always use an independent secondary safety attachment, such as a suitable safety cable. Safety attachments must be rated for the weight of the fixture and comply with applicable safety requirements.

WARNING! Do not look directly into the light source while the fixture is operating. Intense light radiation, including UV radiation, may pose a risk of eye injury.

IMPORTANT! Do not direct powerful external light sources onto the fixture's optical components. This may cause excessive heating or damage to the optical system.

WARNING! Do not connect the fixture to dimmer packs or voltage regulation systems that are not designed for use with this type of equipment.



IMPORTANT! Before first use, carefully unpack the fixture and inspect it for any damage that may have occurred during transportation. If any damage is found, do not operate the fixture. Contact your dealer or an authorized service center.

WARNING! If the fixture malfunctions, stop using it immediately. Do not attempt to repair the fixture yourself. Repairs must only be carried out by qualified personnel using appropriate replacement parts.

IMPORTANT! Before cleaning or performing maintenance, disconnect the fixture from the mains supply and switch it off. Please note that the built-in battery remains a source of electrical power even after the power cable has been disconnected. The fixture contains no user-serviceable parts.

WARNING! The fixture is equipped with a lithium-ion battery. Do not expose the battery to fire, excessive heat or mechanical damage, and do not attempt to disassemble it. If the housing becomes deformed, unusual heating occurs, leakage is detected or any other signs of battery damage appear, immediately stop using and charging the fixture.

IMPORTANT! The battery must only be charged using the power supply system intended for this purpose. Do not use damaged cables, connectors or incompatible charging equipment.


IMPORTANT! The fixture has an IP65 protection rating. Protection against dust and water ingress is only ensured when the housing is properly closed and all connectors are adequately sealed. Before outdoor use, check the condition of seals, protective caps and connections.

IMPORTANT! The maximum ambient operating temperature is 40°C. Do not operate the fixture in environments where the temperature exceeds this limit.

WARNING! The fixture housing may become hot during operation. Do not touch hot surfaces or obstruct the heat sink responsible for passive heat dissipation. Install the fixture at a safe distance from flammable materials.

WARNING! Do not modify the fixture or interfere with its construction, electronic circuits or battery. Unauthorized modifications may damage the fixture and create a risk of fire, burns or electric shock.

PACKAGE CONTENTS

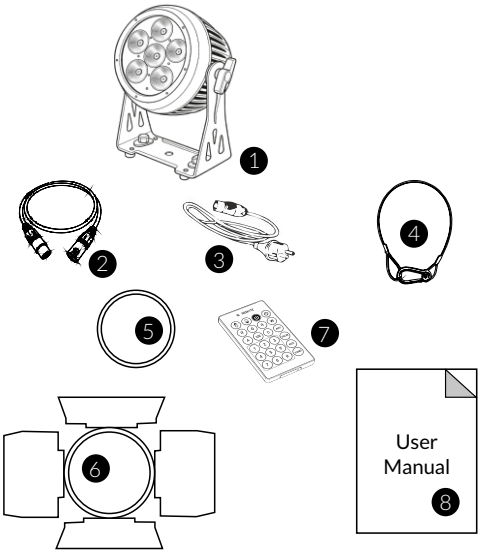

The package contains the following items:

1. ParACCU 620 (1 pc.)
2. DMX cable (1 pc.)
3. TrueCON power cable (1 pc.)
4. Steel safety cable (1 pc.)
5. FROST filter (1 pc.)
6. Barndoors (1 pc.)
7. IR remote control (1 pc.)
8. User manual (1 pc.)

INSTALLATION

WARNING! The fixture must be installed away from pedestrian traffic areas, seating areas and locations accessible to unauthorized persons.

WARNING! Before installation, ensure that the mounting surface or supporting structure can withstand a static load of at least 10 times the weight of the fixture.

WARNING! When installing the fixture overhead, it must always be secured with an additional, independent secondary safety attachment, such as a suitably rated safety cable.

WARNING! It is strictly prohibited to remain beneath the installation area during the installation, removal or servicing of the fixture.

IMPORTANT! The minimum distance between the fixture and flammable materials must be at least 0.5 m.

WARNING! Overhead installation must only be carried out by qualified personnel with appropriate experience in:

calculating static and dynamic loads,
selecting suitable mounting hardware,
assessing supporting structures,
performing periodic installation inspections.

Improper installation may result in serious injury or death.

CAUTION! Before operating the fixture, ensure that all mounting components have been properly installed, secured and inspected.

CLAMP MOUNTING

CAUTION! Only use mounting hardware with an appropriate load capacity, designed for the intended type of installation.

The fixture is equipped with an integrated, adjustable mounting bracket, allowing it to be placed on a stable surface or attached to a lighting structure.

When mounting the fixture on a truss, attach a suitable mounting clamp to the mounting hole in the bracket base or to the Omega bracket. All connections must be properly secured to prevent loosening.

The fixture head is supported by two side arms that allow the tilt angle to be adjusted. After setting the desired position, tighten the locking knobs on both sides of the fixture.

IMPORTANT! If any looseness is detected in the mounting components, immediately inspect and tighten the affected connections. Do not operate the fixture with loose mounting hardware.


WARNING! Regardless of the mounting method, any fixture suspended overhead must always be secured with an independent safety cable.

The safety cable must only be attached to a designated safety attachment point. Do not attach the safety cable to adjustment knobs, cables, connectors or any other components not intended for this purpose.

WARNING! The safety cable must have a suitable load capacity for the weight of the fixture and the installation conditions, and must comply with applicable safety requirements.

CONNECTIONS AND SETTINGS


The fixture is equipped with the following connectors:
DMX (IN/OUT): 3-pin XLR connectors
Power (IN/OUT): TrueCON connectors
The DMX connection is made using a cable fitted with female and male XLR connectors.

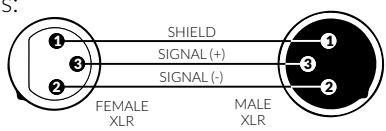

3-PIN XLR

CAUTION! The DMX signal must be terminated at the last fixture in the DMX chain. To create a DMX terminator, solder a 120 Ω resistor between the signal (–) and signal (+) pins of an XLR connector, then plug it into the DMX output of the last fixture.

DMX Cable Connection Diagram

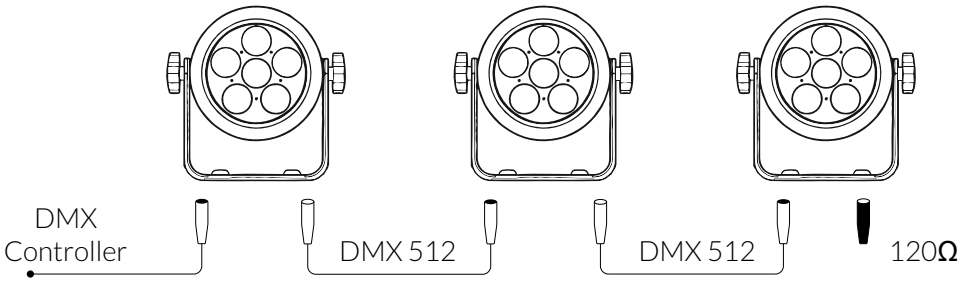

POWER CONNECTION AND OPERATING CONDITIONS

The power connection is made using a power cable fitted with a TrueCON connector (included). The fixture should only be operated by qualified personnel.


CAUTION! If the power cable is damaged, do not attempt to repair it yourself. Replacement or repair must only be carried out by the manufacturer or a suitably qualified person.

During operation, voltage fluctuations should remain within ±10%. Excessively high voltage may shorten the lifespan of the light source, while excessively low voltage may reduce its output or cause improper operation. Adequate heat dissipation must be ensured during operation. Do not obstruct the heat sink or restrict airflow around the fixture. Before cleaning, performing maintenance or packing the fixture, switch it off and allow it to cool down.

IMPORTANT! The maximum number of fixtures connected in a power daisy chain must not exceed 10 units.

Power supply specifications

AC Input Voltage	Frequency	Max Power Consumption
100-240 [V]	50-60 [Hz]	120 [W]

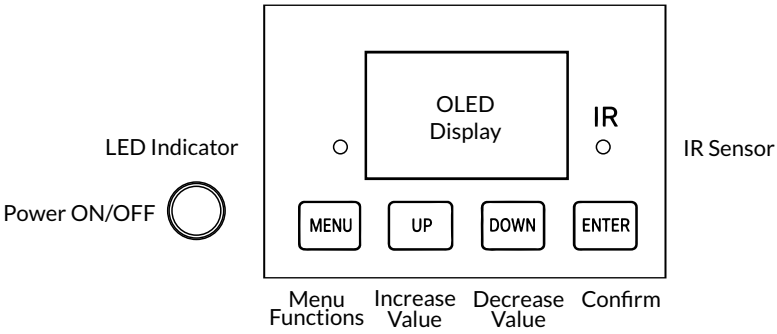

Setting the DMX Address

□ Press the MENU button to access the fixture settings.
□ Use the MENU button to select ADDRESS, then press ENTER.
□ Set the required DMX address (001–512) using the UP and DOWN buttons. Press ENTER to confirm.
□ Press MENU repeatedly until CHANNEL appears. Select the required DMX mode (2CH, 6CH, 8CH or 11CH) and press ENTER to confirm.
□ Press MENU repeatedly until CURVE appears. Select one of the four available dimming curves and press ENTER to confirm.
□ Press MENU repeatedly until DMX FAIL appears. Select how the fixture should respond to a loss of DMX signal:
HOLD – The fixture maintains the last received DMX values.
BLACKOUT – The fixture turns off the light output.
Press ENTER to confirm your selection.
□ Press MENU repeatedly until ADDRESS appears again. The fixture is now ready to operate in the selected DMX mode.

Setting the PWM frequency

□ Press MENU repeatedly until FREQUENCY appears, then press ENTER.
□ Use the UP and DOWN buttons to select the required PWM frequency within the range of 0.6–25 kHz.
□ Press ENTER to confirm the selected setting.

IMPORTANT! Selecting an appropriate PWM frequency helps reduce flickering and banding when recording with a camera. The optimal setting depends on the camera settings.

Setting colors (custom)

□ Press MENU repeatedly until CUSTOM appears, then press ENTER.
□ Use the UP and DOWN buttons to select a color component: RED, GREEN, BLUE, WHITE, AMBER or UV.
□ Press ENTER to adjust the selected color component.
□ Set the value between 0 and 255 using the UP and DOWN buttons.
□ Press ENTER to confirm the setting. Repeat these steps for the remaining color components.

Wireless DMX

The fixture supports two wireless DMX transmission protocols: RD (WDMX) and GZ (F-WDMX).

Selecting the wireless DMX protocol

□ Press MENU repeatedly until WIRELESS DMX appears.
□ Press and hold ENTER for 3 seconds.
□ The protocol selection menu will appear on the display.
□ Use the UP / DOWN buttons to select RD or GZ.
□ Press ENTER to confirm your selection.

RD (WDMX)

After selecting the RD protocol, the following functions are available:
□ On / Off – Enable or disable wireless DMX transmission.
□ Transmit / Receive – Select whether the fixture operates as a transmitter (Transmit) or receiver (Receive).
□ Clear – Clear the existing wireless connection.
□ Connect – Establish a wireless connection.

GZ (F-WDMX)

□ After selecting the GZ protocol, the display will show the following settings:
WIRELESS DMX / (ON) / GROUP ID: 1
□ Press ENTER to access the settings.
□ Use the UP / DOWN buttons to change the ON / OFF setting, enabling or disabling wireless DMX transmission.
□ Navigate to the GROUP ID setting.
□ Use the UP / DOWN buttons to select a group from 1 to 7.
□ Press ENTER to confirm the settings.

Selecting built-in programs (PROGRAM)

□ Press MENU repeatedly until PROGRAM appears, then press ENTER.
□ Use the UP and DOWN buttons to select the required operating mode and press ENTER to confirm.
STATIC Select one of 32 colors; SPEED 00–16
AUTO Automatic color changes; SPEED 00–16
FADE Smooth color transitions; SPEED 00–16
SOUND Four sound-activated programs (01–04); SENS 00–99
CCT Color temperature adjustment from 2000 to 10000 K
WIFI Wireless control via a dedicated app installed on a smartphone or tablet
□ Use the UP and DOWN buttons to adjust the available parameters of the selected mode and press ENTER to confirm.
IMPORTANT! In STATIC mode, setting SPEED to 00 provides steady light output without a strobe effect.

Setting the color temperature (CCT)

□ Press MENU repeatedly until PROGRAM appears, then press ENTER.
□ Use the UP and DOWN buttons to select CCT and press ENTER to confirm.
□ Set the required color temperature within the range of 2000–10000 K.
□ Press ENTER to confirm the setting.

Battery power and charging

Setting the battery runtime (RUN TIME)
□ Press MENU repeatedly until RUN TIME appears, then press ENTER.
□ Use the UP and DOWN buttons to select the required battery runtime: 2, 4, 6 or 8 hours.
□ Press ENTER to confirm the selected setting.

IMPORTANT! The fixture automatically adjusts its maximum light output according to the selected runtime, optimizing battery power consumption. Actual operating time may vary depending on the battery charge level and operating conditions.

Battery charging
The fixture is equipped with a built-in lithium-ion (Li-ion) battery. A full charge takes approximately 8 hours.
For a set of 6 fixtures, charging can be carried out directly inside the transport case. Connect each fixture to an internal power socket using a TrueCON cable. Then connect the case to an AC 100–240 V, 50/60 Hz mains supply using the external TrueCON power connector (POWER IN).
During charging, the charging screen appears on the fixture display. A green LED indicator illuminates when the battery is fully charged.

IMPORTANT! It is recommended to charge the batteries with the transport case open to ensure adequate ventilation and heat dissipation. Do not leave the fixtures unattended while charging.

Operation during charging
The fixture can operate while the battery is charging. To switch from the charging screen to normal operation, press the MENU button.

System settings

BLACK LIGHT – display backlight
□ Press MENU repeatedly until BLACK LIGHT appears, then press ENTER.
□ Use the UP and DOWN buttons to select ALWAYS ON, 10 s, 20 s or 30 s.
□ Press ENTER to confirm the setting.
IR – REMOTE CONTROL
□ Press MENU repeatedly until IR appears, then press ENTER.
□ Use the UP and DOWN buttons to select ON or OFF.
□ Press ENTER to confirm the setting.
MENU LOCK – control panel lock
□ Press MENU repeatedly until MENU LOCK appears, then press ENTER.
□ Use the UP and DOWN buttons to select ON or OFF.
□ Press ENTER to confirm the setting.
IMPORTANT! To unlock the control panel, press and hold the UP and DOWN buttons simultaneously until the panel is unlocked.
FACTORY RESET – restoring factory settings
□ Press MENU repeatedly until FACTORY RESET appears, then press ENTER.
□ Use the UP and DOWN buttons to select YES to restore factory settings or NO to cancel.
□ Press ENTER to confirm your selection.
INFORMATION – fixture information
□ Press MENU repeatedly until INFORMATION appears.
□ Press ENTER to display the fixture's software version.

DMX CHARTS

Mode 2 CH					
Ch	**Function**	**Value**	**Description**	**Default**	**Highlight / locate**
1	Dimmer	0–255	Dimmer	0	255
2	CTC	0–10	No function	128	128
		11–240	CTC		
		241–255	No function		

Mode 6 CH					
Ch	**Function**	**Value**	**Description**	**Default**	**Highlight / locate**
1	Red	0-255	Red min - max	0	255
2	Green	0-255	Green min - max	0	255
3	Blue	0-255	Blue min - max	0	255
4	White	0-255	White min - max	0	255
5	Amber	0-255	Amber min - max	0	255
6	UV	0-255	UV min - max	0	255

Mode 8 CH					
Ch	**Function**	**Value**	**Description**	**Default**	**Highlight / locate**
1	Dimmer	0–255	Dimmer	0	255
2	Shutter	0–9	Open	0	0
		10–255	Strobe 1–20 Hz		
3	Red	0–255	Red min – max	0	255
4	Green	0–255	Green min – max	0	255
5	Blue	0–255	Blue min – max	0	255
6	White	0–255	White min – max	0	0
7	Amber	0–255	Amber min – max	0	0
8	UV	0–255	UV min – max	0	0

Mode 11 CH					
Ch	**Function**	**Value**	**Description**	**Default**	**Highlight / locate**
1	Dimmer	0–255	Dimmer	0	255
2	Red	0–255	Red min – max	0	255
3	Green	0–255	Green min – max	0	255

4	Blue	0–255	Blue min – max	0	255
5	White	0–255	White min – max	0	0
6	Amber	0–255	Amber min – max	0	0
7	UV	0–255	UV fine min – max	0	0
8	Shutter	0–9	Open	0	0
		10–255	Strobe 1–20 Hz		
9	CTC	0–10	No function	0	0
		11–240	CTC		
		241–255	No function		
10	Color macro	0-9 10-50 51-100 101-150 151-200 201-215 216-230 231-245 246-255	Closed light Static color mixing Jump mode Gradient mode Mutation pattern Color changing voice control Color strobe voice control Mutant voice control Breathing voice control	0	0
11	Macro speed	0–255	Macro speed	0	0

MENU STRUCTURE

Display mode	Submenu	Value	Function
Address		001-512	Address code mode
Channel		2CH	2- channel mode
		6CH	6- channel mode
		8CH	8- channel mode
		11CH	11- channel mode
DMX Fail		Blackout	Drop signal line black field
		Hold	Drop the signal line and keep it
Frequency		600 Hz	600 Refresh Frequency
		1200 Hz	1200 Refresh Frequency
		2000 Hz	2000 Refresh Frequency
		4000 Hz	4000 Refresh Frequency
		12 kHz	12K Refresh Frequency
		25 kHz	25K Refresh Frequency
Custom		Red: 0-255	Red manual dimming
		Green: 0-255	Green manual dimming
		Blue: 0-255	Blue manual dimming
		White: 0-255	White manual dimming
		Amber: 0-255	Amber manual dimming
		UV: 0-255	Purple manual dimming
Program	Static	Colour: 01-32	32 Types Static Color Mixing
		Speed: 00-16	Strobe Speed (static color mixing when the speed is 00)
	Auto	Speed: 00-16	Color Jump
	Fade	Fade 01 / Speed: 01-16	Color Gradient
		Fade 02 / Speed: 01-16	Color mutation
		Fade 03 / Speed: 01-16	Color changes
	Sound	Sound: 01 / Sens: 00-99	Voice controlled color change
		Sound: 02 / Sens: 00-99	Voice controlled mutation
		Sound: 03 / Sens: 00-99	Voice controlled color changing strobe
		Sound: 04 / Sens: 00-99	Voice controlled color change+mutation+color change and strobe

Program	CCT	2000-10000K	Color temperature 2000-10000K
WIFI		LED_XXX	WIFI Mode and link address
Wireless	GZ	DMX (ON/OFF)	Wireless 2.4G on/off
		Group ID:1-7	7 wireless groups (red/green/yellow/blue/purple/ cyan/white)
	RD	DMX (ON/OFF)	WDMX on/off
		Transmit / Recieve	Set device to Transmit / Recieve mode
		Clear	Clear last connection
		Connect	Pair new connection
Run Time		2/4/6/8 hours	Lamp usage time setting
Black Light		Always on	Display Normally Open
		10s	Display standby for 10 seconds and turn off screen
		20s	Display standby for 30 seconds and turn off screen
		30s	Display standby for 30 seconds and turn off screen
IR		ON/OFF	Infrared remote control on/off
Menu Lock		ON/OFF	Key lock on/off (When locking the screen, long press the UP+DOWN key to unlock)
Factory Reset		NO/YES	System self check reset
Curve		Led Curve 1	Linear curve
		Led Curve 2	Square curve
		Led Curve 3	Logarithmic curve
		Led Curve 4	S-curve
Information		Version	Software version
		Current Time	Usage time
		Temperature	Fixture temperature
		RDM	ID NO.

REMOTE CONTROL / APP

IR REMOTE CONTROL

The fixture can be operated remotely using an infrared (IR) remote control. Before using the remote control, enable the IR function in the fixture's menu.

Button	Function
Brightness + / –	Increase or decrease brightness and adjust effect speed.
ON	Turn on the light output.
OFF	Turn off the light output.
R, G, B, W, A, UV	Select one of six primary colors.
1–9	Select one of nine preset colors.
AUTO	Activate automatic color changes.
STROBE	Activate the strobe effect.
FADE	Activate smooth color transitions.
SOUND	Activate sound-controlled effects.



IMPORTANT! In AUTO, STROBE and FADE modes, the adjustment buttons allow you to change the effect speed. In SOUND mode, they are used to adjust the sound-controlled effect settings.

WI-FI CONTROL (MOBILE APP)

The ParACCU 620 IP WDMX fixture supports wireless control via the LED LAMP (Stage LED LIGHT) mobile app, available for Android and iOS devices.

Connecting the fixture to the app


□ Install the LED LAMP (Stage LED LIGHT) app on your smartphone or tablet.
□ Press MENU repeatedly on the fixture's control panel until PROGRAM appears, then select WIFI mode.
□ Enable Wi-Fi on your smartphone and search for available wireless networks.
□ Select the fixture's network with a name starting with LED_ (e.g. LED_XXX) and connect to it.
□ Launch the LED LAMP app. Once the connection is established, you can control the fixture's lighting functions.

SCAN TO DOWNLOAD THE APP

IMPORTANT! When using the app, your smartphone must be connected to the Wi-Fi network broadcast by the fixture. The availability of individual control functions depends on the app version.

TECHNICAL DRAWINGS

Product Dimensions (mm)

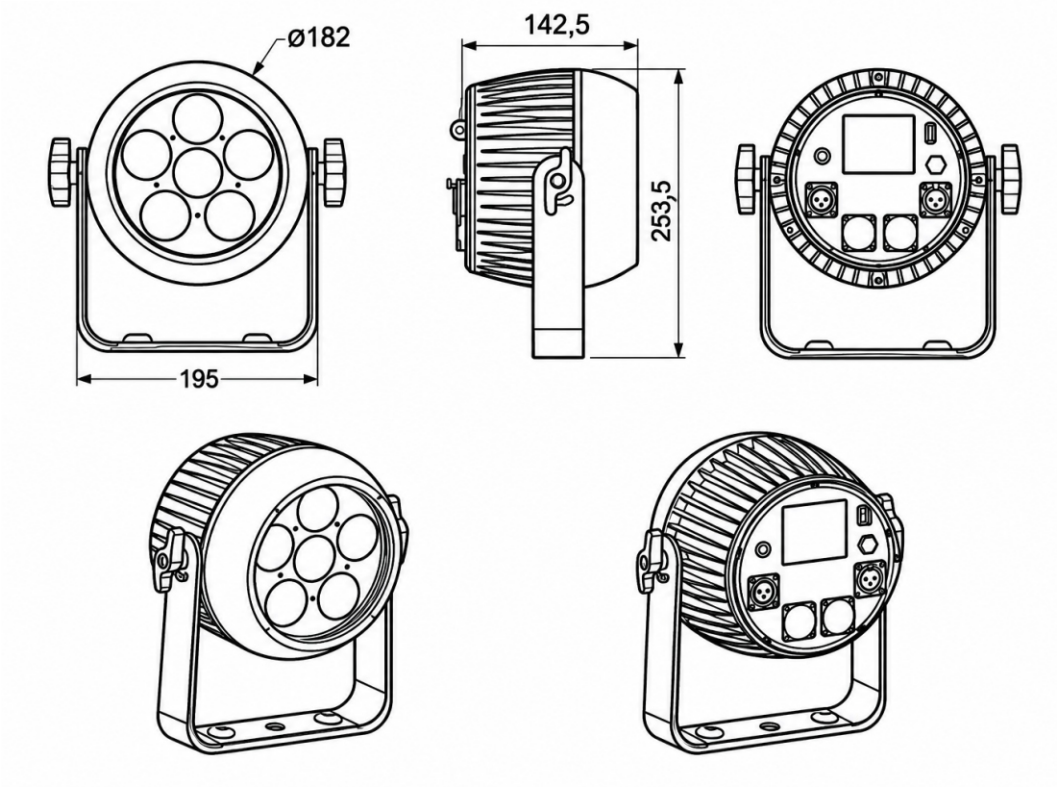

TROUBLESHOOTING

A. The fixture does not turn on or produce light

1. Check the power cable connection and mains voltage.
2. Check the battery charge level. If necessary, connect the fixture to the mains supply and charge the battery.
3. Check that the fixture is switched on and that BLACKOUT mode is not active.
4. Check the brightness settings and selected operating mode.
5. If the fixture still does not operate, contact an authorized service center.

B. No response to dmx control

1. Check that the DMX cables are properly connected and inspect the condition of the XLR connectors.
2. Check the DMX address and selected channel mode (2CH, 6CH, 8CH or 11CH).
3. Ensure that the DMX controller is transmitting signals on the correct channels.
4. Check the DMX FAIL setting and the channel values responsible for brightness and light output.
5. If interference occurs, check the DMX terminator (120) and the routing of signal cables.
6. Try using a different DMX cable or controller.

C. No response to wireless dmx

1. Check that the WIRELESS DMX function is enabled (ON).
2. Ensure that the transmitter and receiver are operating in the correct GROUP ID (1–7).
3. Check that the transmitter is sending a DMX signal.
4. Check the DMX address and channel mode settings.
5. Minimize obstacles between the transmitter and the fixture, and check for strong radio interference nearby.

D. Battery runtime is too short

1. Check the battery charge level.
2. Check the RUN TIME setting (2–8 hours).
3. Remember that actual battery runtime depends on light intensity, selected colors and operating conditions.
4. If the runtime is significantly shorter than expected, have the battery condition checked by an authorized service center.

E. The fixture turns off the light output or reduces brightness

1. Check the brightness settings, selected programs and RUN TIME function.
2. Ensure that the fixture is not operating in an environment with excessively high ambient temperature.
3. Check that the heat dissipation components are not obstructed or dirty.
4. Allow the fixture to cool down before restarting it.

CLEANING AND MAINTENANCE

Regular maintenance and cleaning help maintain optimal light output and ensure reliable operation of the fixture. The cleaning frequency depends on operating conditions, particularly the level of dust and dirt in the surrounding environment.

□ Before cleaning, switch off the fixture, disconnect it from the mains supply and allow it to cool down completely.
□ Clean the optical surface using a soft, lint-free cloth. If necessary, use a small amount of a cleaning solution specifically designed for optical surfaces.
□ Regularly remove dust and dirt from the housing and heat sink responsible for passive heat dissipation.
□ Do not use aggressive detergents, solvents or abrasive materials that may damage the fixture's surfaces.
□ Regularly inspect the condition of power and signal cables, connectors, seals, mounting hardware and the safety cable.
□ After cleaning, ensure that all components are completely dry before operating the fixture again.

IMPORTANT! Do not open the housing or attempt to repair the fixture yourself. Any servicing that requires access to internal components must only be carried out by qualified personnel.

IMPORTANT! Do not direct high-pressure water jets at the fixture. The IP65 protection rating does not mean that the fixture is suitable for high-pressure washing.

SPECIFICATIONS

- AC Input Voltage 100–240 V, 50/60 Hz
- Power Consumption 120 W
- Battery Type Lithium-ion (Li-ion), 18650 cells
- Battery Capacity 12,000 mAh
- Charging Time Approx. 8 h
- Battery Runtime Settings 2 / 4 / 6 / 8 h
- Automatic Brightness Adjustment Yes
- Light Source 6 × 20 W RGBWA+UV LEDs
- Number of Control Sections 1
- Color Temperature 2000–10000 K
- Color Rendering Index (CRI) 90
- Color Mixing RGBWA+UV, 8-bit
- CTO Adjustment Yes, 2000–10000 K
- Dimming 8-bit
- Dimming Curves 4 (Linear, Square, Logarithmic, S-Curve)
- PWM Frequency 600 / 1200 / 2000 / 4000 / 12000 / 25000 Hz
- Beam Angle 15°
- Strobe Effect – Frequency 1–20 Hz
- Control Protocols and Modes DMX512, RDM, W-DMX, F-WDMX, Sound, Auto, Master/Slave, IR, Wi-Fi
- DMX Channel Modes 2 / 6 / 8 / 11 CH
- Display OLED
- Control Buttons Capacitive (Touch-Sensitive)
- AC IN / OUT TrueCON IP65
- DMX IN / OUT 3-pin XLR IP65
- IP Rating IP65
- Housing Material Aluminum
- Mounting Omega Bracket (Fast Lock)
- Housing Color Black
- Cooling Passive (Fanless)
- Dimensions 25 × 16 × 29 cm
- Net Weight 4.4 kg



FLASH

FLASH-BUTRYM SP.J.
SKARBIMIERZYCE 18
72-002 DOŁUJE
POLAND

WWW.FLASH-BUTRYM.PL